

Assembly Instructions



Mountain fold Make a mountain fold.



Valley fold Make a valley fold.



Scissors line Cut along the line

Tools and Materials



Scissors, set square, a used pen, tweezers (useful for handling small parts), ruler. A glue stick, or non-soluble adhesive, (We do not recommend water-soluble woodworking glue as this can warp the shape of the paper.)

Assembly Tip



Before applying glue, fold and make creases along all the mountain and valley fold lines. Trace along the folds with a used pen (no-ink) to get a Sharpe, easier fold.

Caution



This craft requires the use of glue, scissors, tweezers, and other tools which may be dangerous to young children. Please keep them out of reach of children while you work. Non-soluble adhesive or clear lacquer should not be used by children. Also, keep these substances away from open flames and work in a well-ventilated area.


Handy Hints

<Useful Items>

Cotton tips or tissues:

Handy for wiping up excessive glue that oozes out from between parts.

- Two flat boards, or two heavy books: Useful for making the parts flat after attaching the wings.
- 2 The plane will not fly if the paper is wrinkled. Be careful not to fold the paper except along the fold lines. Keep the paper flat when working.
- 3 Painting the plane with clear lacquer (oil-based) will make it stronger, less susceptible to humidity and its shape less likely to warn

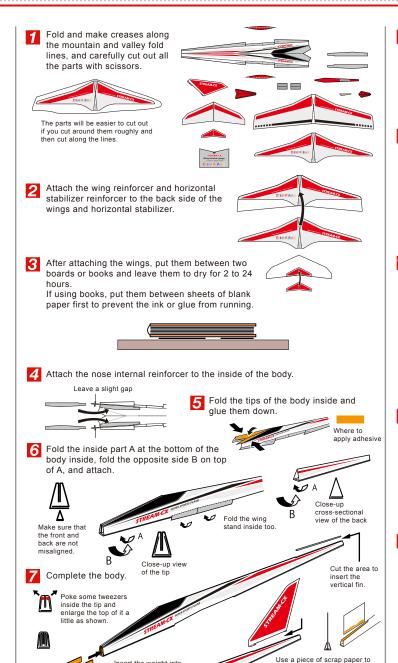



nsert the weight into

the tip and glue it in

apply glue to the inside of the

slot, and then insert the vertical fin and attach it in place

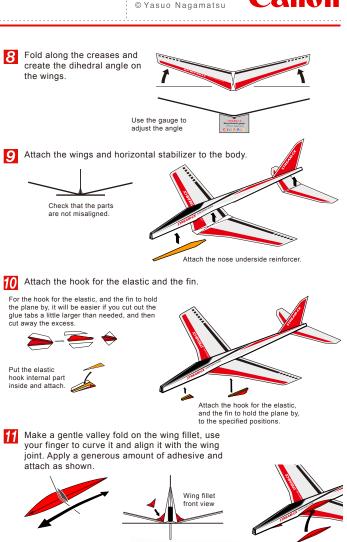

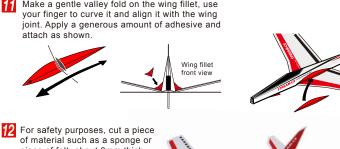



The plane can still cause accidents even with the sponge and felt attached. Be sure to carefully read the Flying Safety Precautions before flying your plane.